
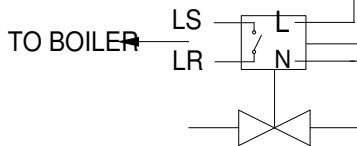
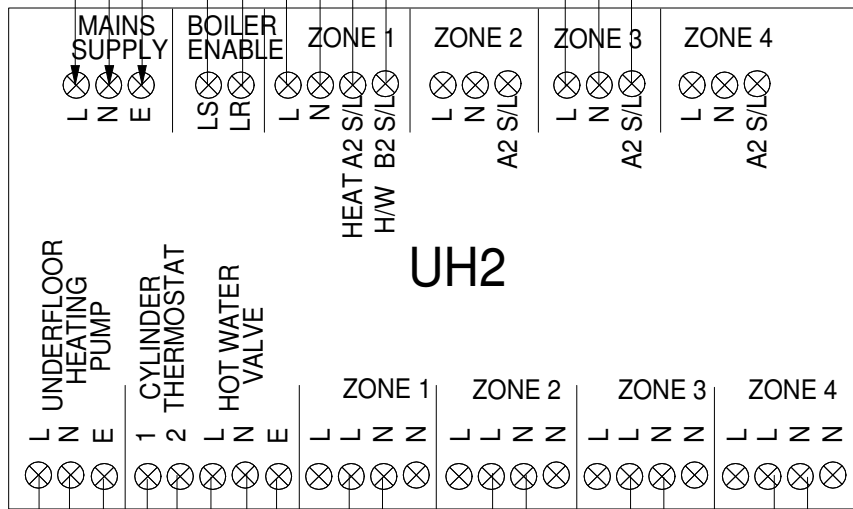
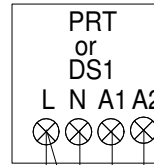


N.B. For boilers requiring a switched live signal connect LS to permanent live and LR to the boiler

To Boiler
LR
LS

Mains Supply
from Boiler
fused Spur

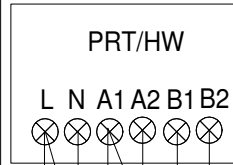

Name	UH2 VERSION 2
Date	24/10/2011 rev 000
Drawn by Alan Mee	